




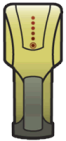


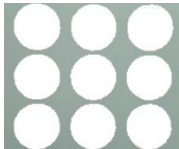

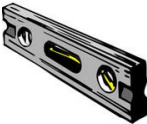
GGOSS

GARAGE - GARDEN - OFFICE - STORAGE - STUDY

GGOSS Plankwall Installation Instructions

1		2		3	
	Find Studs		Hang Plankwall		Accessories

Tools Required:

 Pencil	 Tape Measure	 Stud Finder	 Safety Glasses
 Drill	 Screw Covers	 MDF screws*	 Level



*Screws will be supplied. Indicate the quantity and type required.

Instructions:

1. Handle GGOSS Plankwall with care, do not drag, drop or bend the panel.
2. Locate the studs in your wall and mark their location.
3. If fastening to a masonry or concrete wall it is recommended to use treated battens 50mm x 25mm to give good fixing for the PLANKWALL panels and provide air space between.
4. Avoid drilling in areas where there may be electrical wiring or water pipes. Some stud finders can locate them.
5. Use a level to mark the position and height for your Plankwall.
6. Mark, pre drill and counter sink your GGOSS Plankwall, making sure your holes will line up with the Studs. Fastening should be a minimum of 600mm centres but closer fixing is good.
7. Tip: To help position your Plankwall before fastening, try cutting support braces, taped into position, to prop it up at the correct height.
8. Fasten Plankwall into position, using the MDF screws, 50mm for fastening direct to the studs or 75mm screws for fixing through the plaster board and 40mm going onto battens. Screws will be supplied. Indicate the quantity and type required.
9. Cover screws with screw cover dots.
10. Enjoy your GGOSS Plankwall!